




These instructions apply to only those patch panels that have a rear label the same as the label shown opposite.

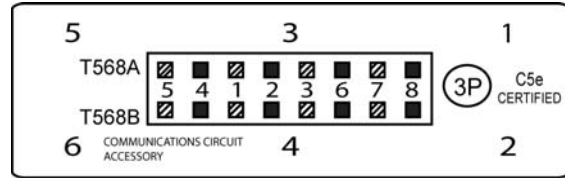

1 Strip approximately 30cm from the end of the cable jacket and separate the wires into four pairs

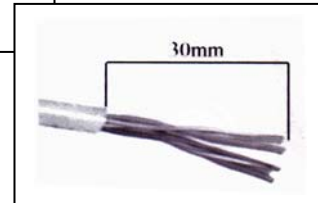

2 Note that adjacent jacks are terminated longitudinally along the sides of the terminating strip as shown.

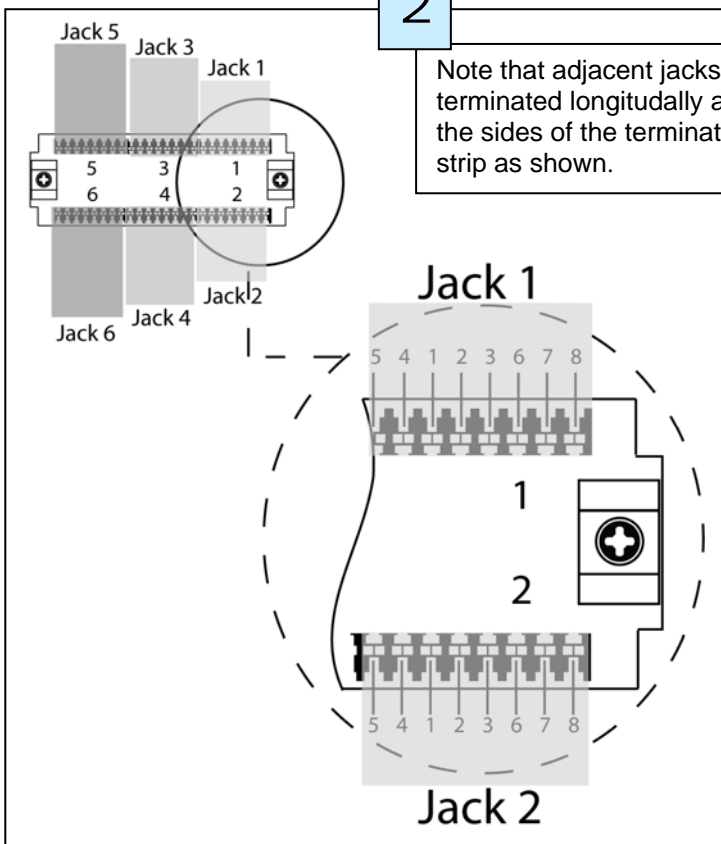

3 Position the wires into the appropriate IDC connector as shown by the following table. The T568A wiring configuration is the one most commonly used in Australia.

	T568A	T568B
Pin 5	Blue/White	Blue/White
Pin 4	Blue	Blue
Pin 1	Green/White	Orange/White
Pin 2	Green	Orange
Pin 3	Orange/White	Green/White
Pin 6	Orange	Green
Pin 7	Brown/White	Brown/White
Pin 8	Brown	Brown

4 Use either a 110 or Krone Type IDC impact tool to terminate the wires. Ensure that the cutting blade is positioned on the outside of the IDC strip.

5 Use the cable holders to manage the cable runs and provide an aesthetically pleasing installation that your customer will admire.

