


DATAMASTER®

P4663 MODE-3 ALARM IDC JACK

Terminating Instructions

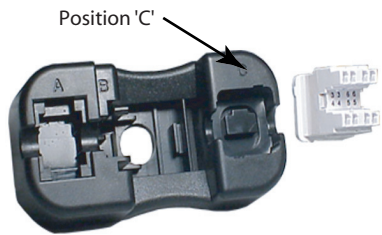


Insert the jack into position 'C' of the supplied safety impact chassis, aligning the jack's plug-entry hole with the plug-shaped protrusion on the safety chassis.



Strip cable jacket approximately 30mm from the end of the cable. Fold any unused pairs (usually Green/Green-white & Brown/Brown-white) back alongside the jacket.

LINE OUT
 ORA/WH ORA
 3 3 6 6
 4 4 5 5
 BLU BLU/WH
 LINE IN

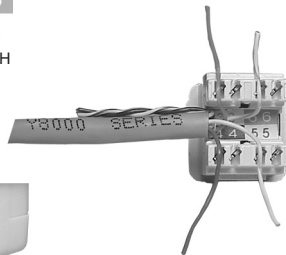

Place the conductors across the IDC slots according the color-coded label. There are 2 parallel IDC positions for each jack contact. Conductors should feed from the centre channel of the jack as shown.



Use a Krone or 110 compatible IDC Impact Tool to terminate the conductors.



Clip on the IDC Cap. The cable entry direction can vary to best suit the installation.